



BIGBEN CONNECTED

Câble universel de charge et synchronisation USB/Micro USB

Un câble de charge et de synchronisation pour les appareils à port micro USB

GENCODE :

3571211295846

REF. :

CABLEFLATMICW

Caractéristiques

- Câble universel blanc de charge et synchronisation USB/Micro USB :
- Connectique USB/Micro USB
 - Compatible avec les appareils équipés d'un port micro USB
 - Câble USB 2.0
 - Permet la charge et la synchronisation du mobile
 - Reliable au port USB d'un ordinateur ou à une base de chargeur USB
 - Longueur de 1 mètre

Atout

Universel
Permet la charge et la synchronisation

Couleurs	Blanc
Contenu du pack	1 câble de charge et de synchronisation USB/Micro USB

MOBILES COMPATIBLES

ACER

[ALLEGRO](#) / [BE TOUCH E130](#) / [BE TOUCH E140](#) / [BE TOUCH E210](#) / [CLOUDMOBILE S500](#) / [ICONIA SMART](#) / [LIQUID E1](#) / [LIQUID E2](#) / [LIQUID EXPRESS E320](#) / [LIQUID GALLANT E350](#) / [LIQUID GLOW](#) / [LIQUID METAL](#) / [LIQUID MINI](#) / [LIQUID Z110](#) / [LIQUID Z2](#) / [LIQUID Z200](#) / [LIQUID Z3](#)

ALCATEL

[ONE TOUCH IDOL](#) / [ONE TOUCH IDOL 2S](#) / [ONE TOUCH IDOL MINI](#) / [ONE TOUCH IDOL S](#) / [ONE TOUCH IDOL ULTRA](#) / [ONE TOUCH M'POP](#) / [ONE TOUCH PIXI 3 4 POUCE](#) / [ONE TOUCH POP S3](#) / [ONE TOUCH STAR](#) / [ONE TOUCH X POP](#) / [OT-203](#) / [OT-506](#) / [OT-506D](#) / [OT-655](#) / [OT-803](#) / [OT-838](#) / [OT-890](#) / [OT-990](#) / [OT-995](#) / [OT-997](#) / [POP 2 4.5](#) / [POP C1](#) / [POP C5](#) / [POP C7](#) / [POP C9](#) / [POP S7](#) / [A3](#) / [A5 LED](#) / [IDOL 3 \(4.7\)](#) / [IDOL 3 \(5.5\)](#) / [IDOL 4](#) / [ONE TOUCH GOPLAY](#) / [PIXI 3 3.5](#) / [PIXI 3 4](#) / [PIXI 3 4.5](#) / [PIXI 4 3G](#) / [PIXI 4 5](#) / [POP 3 5.0](#) / [POP 4](#)

ARCHOS

[40 TITANIUM](#) / [45 HELIUM 4G](#)

ASUS

[PADPHONE 2](#)

BLACKBERRY

[BOLD 9700](#) / [BOLD 9780](#) / [BOLD 9790](#) / [BOLD TOUCH 9900](#) / [BOLD TOUCH 9930](#) / [CURVE 3G 9300](#) / [CURVE 8520](#) / [CURVE 9360](#) / [CURVE 9380](#) / [PEARL 3G 9100](#) / [PEARL 3G 9105](#) / [Q5](#) / [TORCH 9800](#) / [TORCH 9810](#) / [TORCH 9860](#) / [Z10](#)

BOUYGUES TELECOM

[BC 211](#) / [BC311](#) / [BS351](#) / [BS401](#) / [BS402](#) / [BS403](#) / [BS451](#) / [BS471](#) / [ULTYM 4](#) / [ULTYM 4 MAXI](#) / [ULTYM 5](#) / [ULTYM 5.2](#)

CROSSCALL

[TREKKER X3](#) / [TREKKER M 1](#)

DELL

[AERO](#) / [MINI 3IX](#) / [STREAK](#) / [THUNDER](#) / [VENUE PRO](#) / [XCD28](#) / [XCD35](#)

FUJITSU

[STYLISTIC S01](#)

HONOR

[HONOR 6 PLUS](#)

HP
PRE 3 / VEER
HTC
7 MOZART / 7 PRO / 7 TROPHY / CHACHA / DESIRE 310 / DESIRE 510 / DESIRE 601 / DESIRE 610 / DESIRE 620 / DESIRE 626 / DESIRE 816 / DESIRE 820 / DESIRE C / DESIRE EYE / DESIRE HD / DESIRE S / DESIRE X / DESIRE Z / EVO 3D / EXPLORER / GOOGLE NEXUS ONE / GRATIA / HD MINI / HD2 / HD7 / INCREDIBLE S / ONE / ONE M8 / ONE M9 / ONE MINI / ONE MINI 2 / ONE S / ONE SV / ONE V / ONE X / ONE X PLUS / ONE XL / RADAR / RHYME / SALSA / SENSATION / SENSATION EX / SENSATION XL / TITAN / TOUCH HD MINI / WILDFIRE S / WINDOWS PHONE 8S / WINDOWS PHONE 8X / DESIRE 10 LIFESTYLE / DESIRE 530 / DESIRE 650 / DESIRE 825
HUAWEI
ASCEND D QUAD / ASCEND D QUAD XL / ASCEND D1 / ASCEND G300 / ASCEND G6 / ASCEND G6 4G / ASCEND G620S / ASCEND G740 / ASCEND MATE 7 / ASCEND P1 / ASCEND P1 S / ASCEND P7 / ASCEND Y330 / ASCEND Y530 / ASCEND Y550 / G330 / G6150 / IDEOS X5 U8800 / IDEOS X6 U9000 / U8350 / MATE 8 / MATE S / P8 LITE / P8 LITE 2017 / P9 LITE / Y3 / Y5 / Y5 II / Y6 / Y6 II / Y635
LENOVO
MOTO Z
LG
A110 / A133 / A155 / A170 / A200 / A250 / A290 / A310 / C310 / C320 / C360 / COOKIE 3G T320 / COOKIE LITE T300 / COOKIE LIVE KM570 / COOKIE PLUS GS500 / COOKIE STYLE T310 / F60 / F70 / G FLEX 2 / G PRO 2 / G2 / G3 / G3 S / G4 / GM730 / GT350 / GT405 / GT540 / KT770 / L FINO / L65 / L70 / L80 / L90 / MINI GD880 / NEXUS 5 / OPTIMUS 2X P990 / OPTIMUS 3D MAX P720 / OPTIMUS 3D P920 / OPTIMUS 4X HD P880 / OPTIMUS 7 E900 / OPTIMUS BLACK P970 / OPTIMUS CHAT C550 / OPTIMUS CHIC E720 / OPTIMUS F5 P875 / OPTIMUS F6 D505 / OPTIMUS G / OPTIMUS L3 E400 / OPTIMUS L3 II E430 / OPTIMUS L4 II / OPTIMUS L5 E610 / OPTIMUS L5 II E460 / OPTIMUS L7 II P710 / OPTIMUS L7 P700 / OPTIMUS L9 P760 / OPTIMUS ME P350 / OPTIMUS NET / OPTIMUS ONE P500 / OPTIMUS PRO C660 / OPTIMUS SOL E730 / PRADA PHONE 3.0 / PURE GD550 / T315 / T385 / TOWN C300 / VIEWTY SMILE GT400 / VIEWTY SNAP GM360 / BELLO 2 / G4 C / G4 STYLUS / G5 / G6 / K10 / K4 / K7 / K8
LOGICOM
E350 / E400 / E500 / S450 / S504
MICROSOFT
LUMIA 435 / LUMIA 530 / LUMIA 535 / LUMIA 540 / LUMIA 635 / LUMIA 640 / LUMIA 640 XL / LUMIA 830 / LUMIA 650
MOTOROLA
ATRIX 3G / ATRIX 4G MB860 / BRAVO MB520 / DEFY + / DEFY MINI XT320 / DEXT / DROID PRO XT610 / DROID X / FIRE XT316 / FLIPSIDE MB508 / GLEAM / GLEAM PLUS / MILESTONE / MILESTONE 2 / MILESTONE XT720 / MOTO E 4G / MOTO E2 / MOTO G / MOTO G 2014 / MOTO X / MOTO X 2EME GENERATION / NEXUS 6 / PRO / PRO + / RAZR HD XT925 / RAZR I XT890 / RAZR XT910 / SPICE XT300 / WILDER EX130 / MOTO G 3E GENERATION
NOKIA
500 / 603 / 6650 FOLD / 6700 CLASSIC / 701 / ASHA 311 / C2-01 / C3-01 TOUCH AND TYPE / C5 / C5-03 / C6-01 / C7-00 / E5 / E7 / LUMIA 1020 / LUMIA 1320 / LUMIA 1520 / LUMIA 510 / LUMIA 520 / LUMIA 532 / LUMIA 620 / LUMIA 625 / LUMIA 630 / LUMIA 720 / LUMIA 730 / LUMIA 735 / LUMIA 820 / LUMIA 920 / LUMIA 925 / LUMIA 930 / N8 / ORQ / X2 / X2-02 / X3-02 TOUCH AND TYPE
PANASONIC
ELUGA / ELUGA POWER
SAMSUNG
B2710 / C3350 / C3520 / C3530 / C3595 / C3750 / CHAT 222 E2220 / CHAT 335 S3350 / CHAT 350 C3500 / CHAT 357 S3570 / CORBY II S3850 / E1270 / E2530 / GALAXY 550 I5500 / GALAXY 551 I5510 / GALAXY A3 A300 / GALAXY A5 A500 / GALAXY A7 A700 / GALAXY ACE 2 I8160 / GALAXY ACE 3 S7270 / GALAXY ACE 4 4G G357 / GALAXY ACE PLUS S7500 / GALAXY ACE S5830 / GALAXY ACE S5830 ZV / GALAXY ALPHA G850 / GALAXY BEAM I8530 / GALAXY CAMERA GC100 / GALAXY CORE 4G G386 / GALAXY CORE I8260 / GALAXY CORE PLUS G3500 / GALAXY CORE PRIME G360 / GALAXY EXPRESS 2 / GALAXY EXPRESS I8730 / GALAXY FAME LITE S6790 / GALAXY FAME S6810 / GALAXY FIT S5670 / GALAXY GIO S5660 / GALAXY GRAND 2 G7100 / GALAXY GRAND I9082 / GALAXY GRAND NEO I9060 / GALAXY GRAND PRIME G530 / GALAXY I7500 / GALAXY I1 I100 / GALAXY I5 I500 / GALAXY K ZOOM C115 / GALAXY M PRO B7800 / GALAXY MEGA 5.8 I9150 / GALAXY MEGA I9200 / GALAXY MINI 2 S6500 / GALAXY MINI S5570 / GALAXY NAOS I5801 / GALAXY NEXUS I9250 / GALAXY NOTE 2 N7100 / GALAXY NOTE 8.0 N5100 / GALAXY NOTE N7000 / GALAXY POCKET 2 G110 / GALAXY POCKET NEO S5310 / GALAXY POCKET PLUS S5301 / GALAXY POCKET S5300 / GALAXY POP PLUS S5570I / GALAXY PRO B7510 / GALAXY R I9103 / GALAXY S 2 I9100 / GALAXY S 2 I9100 NFC / GALAXY S 2 LTE I9210 / GALAXY S 2 PLUS I9105 / GALAXY S 3 4G I9305 / GALAXY S 3 I9300 / GALAXY S 3 MINI I8190 / GALAXY S 4 ACTIVE I9295 / GALAXY S 4 I9500 / GALAXY S 4 MINI I9190 / GALAXY S 4 ZOOM / GALAXY S 5 MINI G800 / GALAXY S 6 EDGE G925 / GALAXY S 6 EDGE PLUS G928 / GALAXY S 6 G920 / GALAXY S ADVANCE I9070 / GALAXY S I9000 / GALAXY S PLUS I9001 / GALAXY S SCL I9003 / GALAXY TEOS I5800 / GALAXY TREND 2 LITE G318 / GALAXY TREND LITE S7390 / GALAXY TREND PLUS S7580 / GALAXY TREND S7560 / GALAXY W I8150 / GALAXY XCOVER 2 S7710 / GALAXY XCOVER 3 G388 / GALAXY XCOVER S5690 / GALAXY Y PRO B5510 / GALAXY Y S5360 / GALAXY YOUNG 2 G130 / GALAXY YOUNG S6310 / MISS PLAYER S7070 / NEXUS S I9023 / OMNIA M S7530 / OMNIA W I8350 / PLAYER CITY S5260 / PLAYER FIVE S5560 / PLAYER HD I8910 / PLAYER MINI 2 C3310 / PLAYER MINI C3300 / PLAYER STAR 2 S5620 / PLAYER STAR S5600 / PLAYER ULTRA S8300 / S5610 / SHARK S5350 / SMILEY T359 / STAR 3 S5220 / WAVE 3 S8600 / WAVE 533 S5330 / WAVE 575 S5750 / WAVE 578 S5780 / WAVE 723 S7230 / WAVE II S8530 / WAVE M S7250 / WAVE ONE S5250 / WAVE S8500 / WAVE Y S5380 / GALAXY A3 A310 2016 / GALAXY A5 A510 2016 / GALAXY A7 A710 2016 / GALAXY I1 I120 2016 / GALAXY I3 I320 2016 / GALAXY I5 I510 2016 / GALAXY I7 I710 2016 / GALAXY S 7 EDGE G935 / GALAXY S 7 G930 / GALAXY XCOVER 4
SFR
S BY SFR 101 / S BY SFR 102 / S BY SFR 116 / S BY SFR 118 / S BY SFR 1180 / S BY SFR 124 / S BY SFR 501 / SFR S BY SFR 117 / STARADDICT 2 / STARADDICT 2 PLUS / STARADDICT 3 / STARADDICT 4 / STARNAUTE 2 / STARSHINE / STARSHINE 2 / STARTEXT 2 / STARTRAIL 2 / STARTRAIL 3 / STARTRAIL 4 / STARTRAIL 5 / STARTRAIL 6 / STARTRAIL 6 PLUS / WINDOWS PHONE INTERNET 7 / STARTRAIL 7 / STARTRAIL 8 / STARXTREM 4 / STARXTREM 5 / STARXTREM 6
SONY
ASPEN / LIVE WITH WALKMAN / MIX WALKMAN / SPIRO / TXT / TXT PRO / VIVAZ PRO / VIVAZ U5 / W8 / XPERIA ACTIVE / XPERIA ARC / XPERIA ARC S / XPERIA C3 / XPERIA C4 / XPERIA E / XPERIA E1 / XPERIA E3 / XPERIA E4 / XPERIA E4G / XPERIA GO / XPERIA I / XPERIA KYNO / XPERIA KYNO V / XPERIA M / XPERIA M2 / XPERIA M4 AQUA / XPERIA MINI / XPERIA MINI PRO / XPERIA MIRO / XPERIA P / XPERIA PLAY / XPERIA PRO / XPERIA RAY / XPERIA S / XPERIA SP / XPERIA T / XPERIA T2 ULTRA / XPERIA T3 / XPERIA TIPO / XPERIA U / XPERIA X10 / XPERIA X10 MINI / XPERIA X10 MINI PRO / XPERIA X8 / XPERIA Z / XPERIA Z ULTRA / XPERIA Z1 / XPERIA Z1 COMPACT / XPERIA Z2 / XPERIA Z3 / XPERIA Z3 COMPACT / XPERIA Z3+ / XPERIA ZL / XPERIA C5 ULTRA / XPERIA E5 / XPERIA M5 / XPERIA X / XPERIA Xa / XPERIA Z5 / XPERIA Z5 COMPACT
SOSH
LE MOBILE SOSH / SOSHPHONE MINI
WIKO
BARRY / CINK / CINK FIVE / CINK KING / CINK PEAX / CINK PEAX 2 / CINK PLUS / CINK SLIM / DARKFULL / DARKMOON / DARKNIGHT / DARKSIDE / DEA / DUELLE / GOA / HIGHWAY / HIGHWAY PURE 4G / IGGY / KITE / LENNY / OZZY / RAINBOW / RIDGE 4G / RIDGE FAB 4G / SLIDE / SOAP / STAIRWAY / SUBLIM / SUNSET / SUNSET 2 / VENIA / WAX / FEVER / FREDDY / HIGHWAY SIGNS / HIGHWAY STAR 4G / JERRY / LENNY 2 / LENNY 3 / PULP 4G / PULP FAB / RAINBOW 4G / RAINBOW IAM 3G / RAINBOW IAM 4G / RAINBOW LITE 4G / RAINBOW UP 4G / ROBBY / SELFY 4G / SUNNY / TOMMY / U FEEL / U FEEL LITE / U FEEL PRIME
ZTE
BLADE Q / BLADE S / ERA / FTV / GRAND MEMO V9815 / GRAND X IN / MIMOSA X / ORBIT / R236 / R237 / R620 / S203 / SKATE / SKATE MESSAGE / STYLE Q / TANIA / X991 / BLADE A452 / BLADE V7 LITE