

Twin Microphones Sing-A-Long Stereo CD Player

CD47





1. POWER
2. LED DISPLAY
3. OPEN (CD COMPARTMENT DOOR OPEN)
4. MICROPHONE
5. MICROPHONE ON/OFF SWITCH (ON MICROPHONE)
6. CD COMPARTMENT DOOR
7. BATTERY COMPARTMENT DOOR (REAR OF UNIT)
8. MIC VOL (MICROPHONE VOLUME CONTROL)
9. PLAY/PAUSE BUTTON
10. B.SKIP (BACKWARD SKIP) BUTTON
11. F.SKIP (FORWARD SKIP) BUTTON
12. STOP BUTTON
13. REPEAT BUTTON
14. PROGRAM BUTTON
15. HEADPHONE JACK (REAR OF UNIT)
16. OFF.VOL. (POWER ON/OFF SWITCH/MASTER VOLUME CONTROL)

USING OPTIONAL TRANSFORMER (NOT INCLUDED)

- Use only recommended transformer.
- The transformer is not a toy.
- Disconnect transformer before cleaning.
- The transformers used with the toy are to be regularly examined for damage to the cord, plug enclosure and other parts, the toy must not be used with this transformer until the damage has been repaired.

NOTE: When you plug the transformer into the unit, the batteries are automatically disconnected. To use battery power, remove the transformer plug from the unit.

CAUTION: This unit is designed to operate with a negative center, 6V 5W transformers only. Connecting it to any other transformers may damage the unit. Transformers are available in most radio stores.

Adaptor specification: Input: AC 240V, 50Hz Output: DC 6V,600mA Connection terminal:ø5.5x12mm Female plug

CD OPERATION

1. Switch the unit on by turning OFF.VOL (POWER ON/OFF SWITCH / MASTER VOLUME CONTROL) knob.
2. Lift up the lid to reveal the CD player. "no" shows on the LED DISPLAY indicating there is no disc inside the CD compartment. Lift up the CD compartment door and place a disc on the center spindle, with the printed label side facing up. Then lower the CD compartment door.
3. The LED DISPLAY will show "--" for a few seconds, then the total number of tracks on the disc will appear on the display.
4. Press PLAY/PAUSE button to start playback.
5. Adjust OFF.VOL. (POWER ON/OFF SWITCH/ MASTER VOLUME CONTRIL) knob to the desired level.
6. During CD playback, press PLAY/PAUSE button to pause the disc momentarily. Press PLAY/PUSE button again to release pause and resume normal CD playback.
7. Press STOP button to stop playback

SING-A-LONG

1. Place a disc inside the CD compartment.
2. Press PLAY/PAUSE button until it latches.
3. Slide MICROPHONE ON/OFF switch to ON position while singing.
4. Adjust MIC VOL (MICROPHONE VOLUME CONTROL) knob to the desired level.

NOTE: Do not put the microphone too close to the speaker as the microphone too close to the speaker as this may cause feedback (squealing noise) through the speaker.

TO USE AS A PA (PUBLIC ADDRESS) SYSTEM

No disc is needed. Just talk through the unit.

1. Slide MICROPHONE ON/OFF switch to ON position.
2. Adjust MIC VOL (MICROPHONE VOLUME CONTROL) knob to the desired level.
3. Speak or sing into the microphone.

NOTE: Do not put the microphone too close to the speaker as this may cause feedback (squealing noise) through the speaker.

TO BEGIN PLAYBACK FROM A SPECIFIC TRACK

1. After you insert the disc into the CD Player and the total number of tracks appear and the total number of tracks appear on the display. You may press either F.SKIP (FORWARD SKIP) or B.SKIP (BACKWARD SKIP) button to select a specific track for playback.
2. When the desired track number appears in the display, press PLAY/PAUSE button. Playback will begin on the track you desired.

SKIP FORWARD REVERSE DURING PLAYBACK

1. Press F.SKIP (FORWARD SKIP) button to listen to the next track.
2. Press B.SKIP (BACKWARD SKIP) button to listen to the previous track.

REPEAT PLAYBACK

To select the single track repeat function, choose the track that you want to repeat, then press REPEAT button once to activate the single track repeat and the display will flash. Press PLAY/PAUSE button to play the track. To select the "All Tracks Repeat" function, press REPEAT button twice to activate the "All Tracks Repeat" function and the display will light up. Press PLAY/PAUSE button to start the track.

PROGRAMMED PLAYBACK

1. Press PROGRAM button once, the LED DISPLAY showing "01", and the PROGRAM LED INDICATOR will both flash.
2. Press F.SKIP (FORWARD SKIP) or B.SKIP (BACKWARD SKIP) button to select a track.
3. Press PROGRAM button again to store the selected track number.
4. Repeat steps 2 and 3 above to program other tracks.
5. Press PLAY/PAUSE button to start programmed playback and the PROGRAM LED INDICATOR should light up.
6. To erase the programmed sequence, switch the unit OFF by turning OFF.VOL, (POWER ON/OFF SWITCH / MASTER VOLUME CONTROL) knob.
7. Press PROGRAM button in succession to review the tracks currently memorized and change the track number as desired.

NOTE: A maximum of 20 tracks can be programmed to play in any order.


CARE AND MAINTENANCE

Caring for Compact Discs

- Treat the compact disc carefully. Handle the compact disc only by its edge. Never allow your fingers to come in contact with the shiny, unprinted side of the compact disc.
- Do not attach adhesive tape, stickers, etc. to the compact disc label.
- Clean the compact disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the compact disc. If necessary, use a CD cleaning kit.
- If a compact disc skips or gets stuck on a section of the compact disc, it is probably dirty or damaged (scratched).
- When cleaning the compact disc, wipe in straight lines from the center of the compact disc to the outer edge of the disc. Never wipe in circular motions.
- This unit is designed to play only compact discs, other discs may not conform to the CD standard and may not play properly.
- Compact discs should be stored in their cases after each use to avoid damage.
- Do not expose compact discs to direct sunlight, high humidity, high temperatures, or dust, etc. prolonged exposure or extreme temperatures can warp the compact disc.
- Don't stick or write anything on either side of the compact disc, Sharp writing instruments, or the ink may damage the surface.

Cleaning the unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and damp cloth may be used on the front panel.

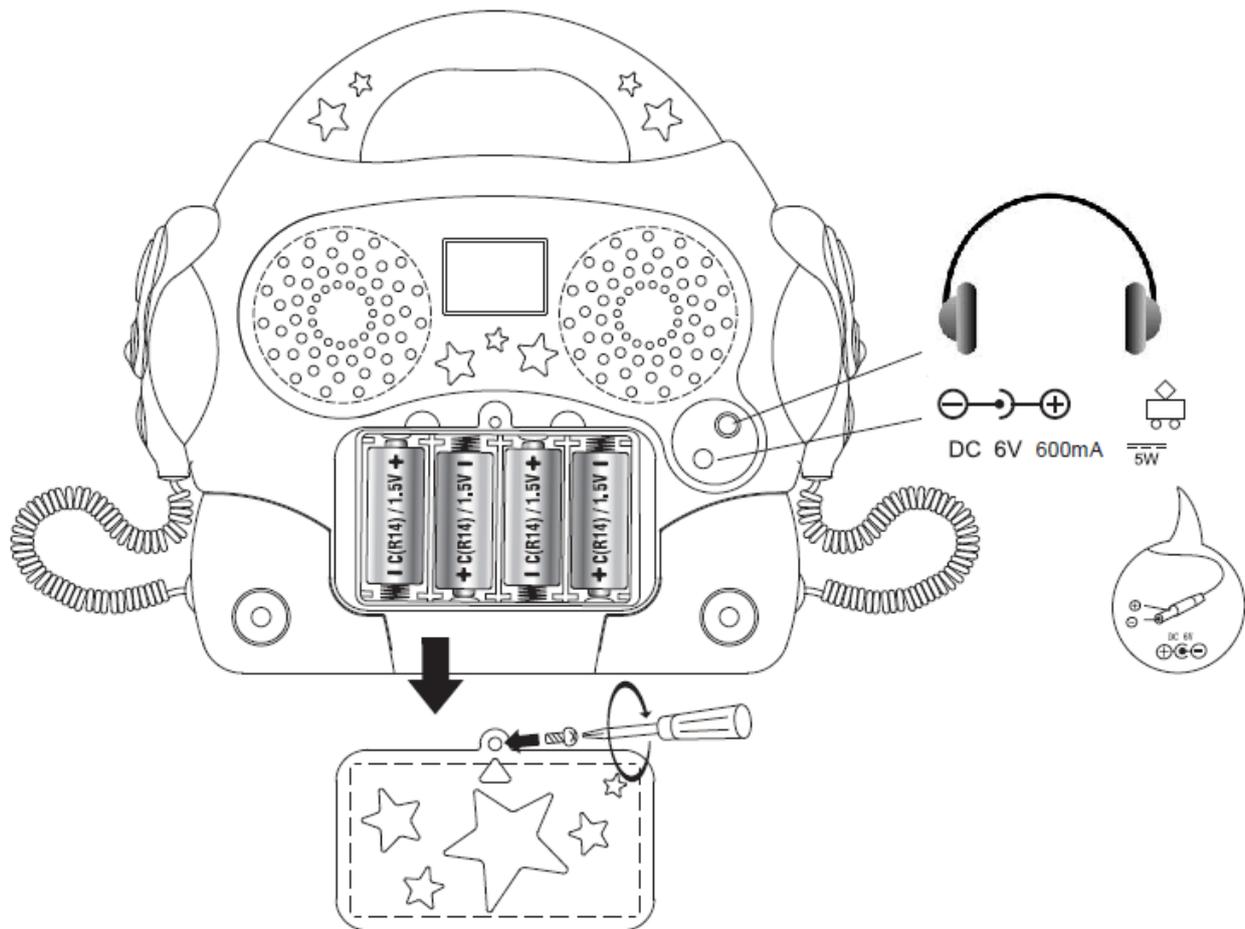

Battery Information:

- Uses 4 “C” batteries (not included). Please note: Alkaline batteries will usually last longer and reduce the possibility of battery leakage.
- Do not leave batteries inside the toy when it is not in use.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not be recharged.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Batteries must be installed by an adult.

Installing Battery:

- To open the battery door: Using screw driver to loosen the screw, pull the battery door (as shown in diagram).
- Install the batteries making sure the “+” and “-” ends of the batteries correspond properly (as shown in diagram).
- If the batteries are not installed correctly the set will not work.
- If the sound becomes weak or unclear, replace all of the batteries.
- If the unit is left unused for a long period of the time , removed batteries to prevent leakage or possible damage to the unit.

Packing has to be kept since it contains important information.

- Don't throw the electrical and electronic appliances into the usual dustbin.
- Bring them to a collecting point.
- Some parts contained in these appliances may be dangerous for health and environment.



Imported by Bigben Interactive SA

CRT2 – Rue de la Voyette

59818 Lesquin Cedex

www.bigben.eu

Made in China

