

CR50/CR51
ALARM CLOCK RADIO



OPERATING INSTRUCTIONS

PLEASE READ THIS USER MANUAL CAREFULLY BEFORE
OPERATING THIS UNIT AND RETAIN FOR
FUTURE REFERENCE.

Contents

| | | | |
|-------------------------|---|------------------------|---|
| Setting Started | 1 | Description of Parts | 3 |
| Safety and Notice | 1 | Power | 3 |
| Care for your product | 2 | Operating instructions | 4 |
| Care of the environment | 2 | Specifications | 6 |
| What's in the box | 3 | Remarks | 7 |

Setting Started

- Remove the appliance from the box.
- Remove any packaging from the product.
- Place the packaging inside the box and either or dispose of safely.

Safety and Notice

Read and understand all instructions before you use this product. If damage is caused by failure to follow the instructions, the warranty does not apply.

Safety

Warning



- Never remove the casing of this apparatus.
- Never lubricate any part of this device.
- Never place this device on other electrical equipment.
- Keep this device away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this device.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this device from the power supply.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the Point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.

13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in anyway, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Apparatus shall not be exposed to dripping or splashing.
15. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
16. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
17. Make sure there is enough free space around the product for ventilation.
18. Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Care for your product

1. Always unplug the appliance when not in use and before cleaning.
2. Do not play music at excessive volume levels as damage to hearing and or the equipment may occur.
3. Do not use this unit in wet or damp conditions.
4. Always disconnect the unit from the mains power supply before cleaning. Clean the appliance with a soft, damp, lint free cloth. Do not use abrasives or harsh cleaners.

Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health



This product is intended for use only with the adaptor (Manufacturer: DongGuan Obelieve Electronic Co.,Ltd., Model no. OBL-0500250E/ OBL-0500250B / OBL-0500250R)

- The marking information is located at the bottom of apparatus.
- The AC/DC adaptor is used as the disconnect device, the socket-outlet shall be easily accessible.
- CAUTION: Risk of explosion if the battery is replaced by an incorrect type.
- High or low extreme temperatures that a battery cannot be subjected to during use, storage or transportation and low air pressure at high altitude.
- Replacement of a battery with an incorrect type that can defeat a safeguard.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.


What's in the box

Check and identify the contents of your package:


- Main unit
- User manual
- Adaptor

Description of Parts

1. SPEAKER
2. LED DISPLAY
3. STANDBY BUTTON
4. ALARM 1 / VOLUME – BUTTON
5. ALARM 2 / VOLUME + BUTTON
6. SLEEP BUTTON
7. SNOOZE / DIMMER BUTTON
8. TIME SET / MEMORY BUTTON
9. HOUR / REVERSE BUTTON
10. MINUTE / FORWARD BUTTON
11. PRESET BUTTON
12. FM WIRE ANTENNA
13. BATTERY DOOR
14. DC JACK

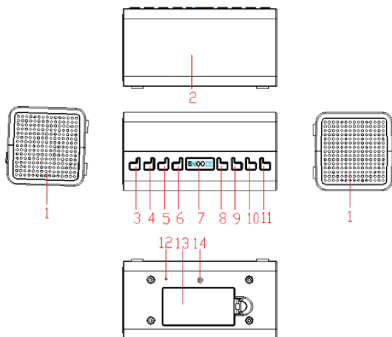

Power

| | |
|---|--|
|  CAUTION | <p>Risk of product damage! Make sure that the power voltage corresponds to the voltage printed on the back label.</p> <p>Risk of electric shock! When you unplug the AC/DC adaptor always pull the plug from the socket. Never pull the cord.</p> <p>Before connecting the AC/DC adaptor, ensure you have completed all other connections.</p> |
|---|--|

Battery power:

Be sure that the batteries are inserted correctly to avoid damage to the appliance. Always remove the batteries when appliance will not be used for a long period of time, as this will cause leakage to the batteries and subsequently damage to your set.

Use batteries of the same type. Never use different types of batteries together.

Do not throw the battery into the fire, or exposed to sunshine or the like.

If the liquid contained in the batteries comes in contact with eyes or skin, wash the area immediately and carefully with clear water and consult a doctor.

POWER SUPPLY

OPERATING THE UNIT ON AC POWER

Insert one end of the supplied adaptor power cord into the DC 5V IN Jack located at the rear of the unit and the other end into the wall outlet.

When used for the first time the cord has to be firmly pushed into the socket. If it does not work on AC, try again to be sure of a positive connection. The unit is now working and the display figures will blink to show you it is operating, but not yet set.

OPERATING INSTRUCTIONS

1. **STANDBY BUTTON**

- Press the button to turn the radio to "ON" or "OFF".

2. **TIME SET / MEMORY BUTTON**

- In FM mode, press this button to set up and assign the desired frequencies of the preset stations.
- In standby mode, this button is the TIME SET button. Long press this button to trigger TIME SET MODE and the display will start blinking. Press the **HOUR / REVERSE** button to set the Hour and the **MINUTE / FORWARD** button to set the Minute.

3. **PRESET BUTTON**

- Press the **PRESET** button to select the preset stations displayed from P01 to P20.

4. **SLEEP SET BUTTON**

- This button is the SLEEP SET button. Press the button and the device will turn off after the displayed minutes from 90, 60, 30, 15, 10 and 5 minutes.

5. **ALARM 1 / VOLUME- BUTTON...**

- When the device is in standby mode, this button is the **ALARM 1** button.
 - Press the **ALARM 1** button to turn Alarm 1 on or off. This is indicated by the light next to Alarm 1 on the display.
 - Long press the **ALARM 1** button to set Alarm 1's time. When the time display is blinking after the long press, press the **HOUR / REVERSE** button to set the HOUR and the **MINUTE / FORWARD** button to set the MINUTE.
- When the device is in FM mode, this button is the **VOLUME-** button.
 - Lower the volume by 1 unit by pressing this button.
 - Long press the **VOLUME-** button to decrease the volume to the desired unit.

6. **ALARM 2 / VOLUME+ BUTTON...**

- When the device is in standby mode, this button is the **ALARM 2** button.
 - Press the **ALARM 2** button to turn Alarm 2 on or off. This is indicated by the light next to Alarm 2 on the display.
 - Long press the **ALARM 2** button to set alarm 2's time. When the time display is blinking after the long press, press the **HOUR / REVERSE** button to set the HOUR and the **MINUTE / FORWARD** button to set the MINUTE.
- When the device is in FM mode, this button is the **VOLUME+** button.
 - Increase the volume by 1 unit by pressing this button.
 - Long press the **VOLUME+** button to increase the volume to the desired unit.

7. **HOUR / REVERSE button**

- When the device is in standby mode, this button is the **HOUR** button.
 - This button can be used as instructed above.
- When the device is in FM mode, this button is the **REVERSE** button.
 - Press this to lower the radio frequency by 0.05 MHz.
 - Long press this to activate auto scanning in the lower frequency ranges.

8. **MINUTE / FORWARD button**

- When the device is in standby mode, this button is the **MINUTE** button.
 - This button can be used as instructed above.
- When the device is in FM mode, this button is the **FORWARD** button.
 - Press this button to increase the radio frequency by 0.05 MHz.
 - Long press this to activate auto scanning in the upper frequency ranges.

9. **SNOOZE / DIMMER BUTTON...**

- When you are wakened by the alarm but wish to sleep for a few more minutes, simply touch the **"SNOOZE"** button and it will turn the alarm off for 9 minutes before the music or buzzer sound again. This can be repeated.
- Press the button repeatedly to choose the brightness of the LED display. 3 levels can be selected such as High, Low and Off.

TO SET THE TIME

1. In standby mode, long press the **TIME SET / MEMORY** button to trigger TIME SET MODE and the display will start blinking. Press the **HOUR / REVERSE** button to set the Hour and the **MINUTE / FORWARD** button to set the Minute.

Note:

- Keep pressing the **HOUR / REVERSE** button or the **MINUTE / FORWARD** button if you run past the correct time.
- Time is displayed in 24-hour clock format.

TO SET THE ALARM

- When the device is in standby mode,
 - Press the **ALARM 1 / VOLUME-** button to turn Alarm 1 on or off. This is indicated by the light next to Alarm 1 on the display.
 - Long press the **ALARM 1 / VOLUME-** button to set Alarm 1's time. When the time display is blinking after the long press, press the **HOUR / REVERSE** button to set the HOUR and the **MINUTE / FORWARD** button to set the MINUTE.
- Note: This is the same as setting up Alarm 2.

TO TURN OFF THE ALARM

- In standby mode,
 - Press the **ALARM 1 / VOLUME-** button to turn Alarm 1 off.
 - The indicator light of Alarm 1 will disappear.
- Note: This is the same as setting up Alarm 2.

TO PLAY THE RADIO

1. Press the **STANDBY** button to turn on the unit.
2. Use the **HOUR / REVERSE** button and the **MINUTE / FORWARD** button to adjust the radio frequency as instructed above.
3. Use the **ALARM 1 / VOLUME-** button and the **ALARM 2 / VOLUME+** button to adjust the volume as instructed above.
4. Press the **STANDBY** button again to turn off the unit.

TO WAKE UP TO RADIO/BUZZER

1. For Alarm 1, set the alarm as previously instructed.
2. After setting the time, press again the **ALARM 1 / VOLUME-** button and the radio frequency is shown.
 - Use the **HOUR / REVERSE** button and the **MINUTE / FORWARD** button to choose to wake up to Radio (displayed as frequency) or Buzzer (displayed as bU)
3. Press the **ALARM 1 / VOLUME-** button again to exit the ALARM SETTING MODE.

Note: This is the same as Alarm 2.

SLEEP CONTROL

1. Press the **STANDBY** button to turn on the unit.
2. Press the **TIME SET / SLEEP SET** button to choose the Device-Sleep time from 90, 60, 30, 15, 10 and 5 minutes
3. The device will turn off after the displayed minutes from the minutes you selected.
4. To turn this off press the **TIME SET / SLEEP SET** button until the display shows "OFF".

TO SNOOZE

1. When you are wakened by the buzzer but wish to sleep for a few more minutes, simply touch the "**SNOOZE**" button and it will turn the buzzer off for 9 minutes before the music or buzzer sound again. This can be repeated.

TO LISTEN TO PRESET STATIONS

1. Set your desired frequency to be ready as a PRESET STATION.
2. Press the **MEMORY** button to enter PRESET SET-UP MODE.
3. P01 will blink. Press the **MEMORY** button again to set the current frequency as P01.
4. Repeat step 2 and step 3 until PRESET stations from P01 to P20 are set up.
5. Press the **PRESET** button listen to preset station P01.
6. Press the **PRESET** button again to move on to preset station P02, and do the same to reach other preset stations.
7. To change the preset stations, repeat the steps above.
8. To restore default settings the device needs to be powered off.

BATTERY BACK-UP

Your clock has a battery back-up feature in case of power failure. 2 x AAA batteries (not included) are required. You must insert the batteries to ensure that the battery back-up feature is ready in case of power failure. If the power fails, the back-up battery will automatically continue operation of the clock and maintain actual time. However, the display will not be lit. During actual power failure the alarm function will not be operational. When electrical power is restored, the display will light up again and the previously set alarm time is restored. The battery will maintain timekeeping for approximately 8 hours during power failure or interruption.

NOTE: Remove the battery if the clock is to be unplugged for a long time to avoid unnecessary battery drain.



Note the following information: Only use the power supplies listed below.

Adaptor specification

- Adaptor manufacturer name or trademark: DongGuan Obelieve Electronic Co.,Ltd
- Address: Huazhaoxin Industrial Park B-4/F, Golden Phoenix Industrial Zone, FengGan Town, DongGuan, Guangdong Province, P.R.C.
- Adaptor Model Number: OBL-0500250E/ OBL-0500250B / OBL-0500250R
- Input voltage and frequency: 100-240V~50/60Hz 0.3A MAX
- Output voltage, current, power: 5.0V, 0.25A, 1.25W
- Average active efficiency: 73.22%
- Efficiency at low load (10%): %
- No-load power consumption: 0.035W
- Frequency ranges: FM: 88.8 – 108Mhz
- Clock Back-up: 2 X 1.5V, AAA, LR03

Remarks:



Don't discard the electrical and electronic appliances in the regular waste disposal.

- Take them to a collection point.
- Some components in these appliances may be hazardous to health and the environment.

- THOMSON is a trademark of TECHNICOLOR SA or its affiliates used under license to Bigben Interactive.
- You can find the information on the plate located at the back of the unit.

DECLARATION OF CONFORMITY

The undersigned, Bigben Interactive declares that the radio equipment of the CR50/CR51 type complies with the 2014/53/EU directive.

The complete text is available at <https://www.bigben-interactive.co.uk/support/>



BATTERY WARNING

KEEP OUT OF REACH OF CHILDREN

Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

Imported by BIGBEN INTERACTIVE SA

396, Rue de la Voyette

CRT2 - FRETIN

CS 90414

59814 LESQUIN Cedex - France

www.bigben.eu

Made in China



Fabricant : Bigben Interactive FRANCE

396, Rue de la Voyette, C.R.T. 2, Fretin,
CS90414 - 59814 Lesquin Cedex, France

Bigben Interactive DEUTSCHLAND GmbH

Walter Gropius Str. 28, 50126 Bergheim, Deutschland

Bigben Interactive Belgium s.a./n.v.

Waterloo Office Park / Bâtiment H

Drève Richelle 161 bte 15 1410 Waterloo, Belgium

Bigben Interactive NEDERLAND b.v.

's-Gravelandseweg 80, 1217 EW Hilversum, Nederland

Bigben Interactive SPAIN S.L.

C/ Musgo 5, 2ª planta, 28023 Madrid, Spain

Bigben Interactive ITALIA s.r.l.

Corso Sempione 221, 20025 Legnano - MI, Italia

FABRIQUE EN CHINE / MADE IN CHINA

HOTLINE

FRANCE, du lundi au vendredi (sauf jours fériés) :
9h00-18h00 ou support.thomson@bigben.fr

► N°Cristal 09 69 39 79 59

APPEL NON SURTAXE

DEUTSCHLAND, Montag bis Freitag von

09:00 bis 18:00 Uhr (außer an Feiertagen)

Tel.: 02271-9047997

Mail: support@bigben-interactive.de

BELGIQUE, customerservice@bigben-interactive.be

NEDERLAND, customerservice@bigben-interactive.nl

ESPAÑA, sat@bigbenespana.es

ITALIA, support@bigbeninteractive.it

www.bigben.eu